 


CampGlow Compact Camping Lantern Rechargeable LED Light

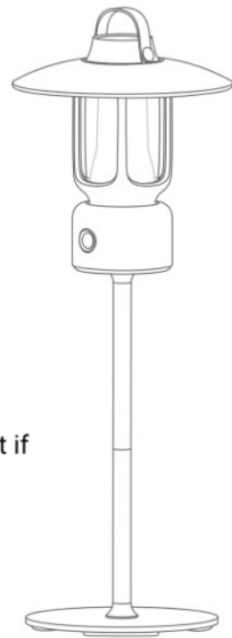

*Check this manual before use, download it if necessary for reference.

SAFETY INSTRUCTIONS

1. Please carefully read the user manual before using the lantern so that you can use and maintain it correctly.
2. Please fully charge this lantern before using it for the first time.
3. Please keep this lantern out of the reach of children. For children under the age of 10, make sure they are supervised with adults when using the lantern.
4. Do not attempt to disassemble, alter or repair the lantern yourself.
5. During use, if there is any abnormality, please stop using the lantern immediately and contact the manufacturer.
6. Do not disassemble or alter the built-in battery inside the lantern.
7. Please use the lantern with caution in wet environments (e.g. a bathroom) or floods. If the lantern comes into contact with water, please stop using it immediately.
8. If the lantern gets hot or is out of shape when charging, please immediately stop charging and contact the manufacturer.
9. Please do not use the lantern in a high-temperature environment, near fire source or heating appliances.
10. Do not touch the lantern with wet hands when charging to prevent an electric shock.
11. The operating temperature of this lantern is between -10°C to 40°C .
12. Do not charge the lantern on any flammable objects, such as carpets.
13. Make sure to power off the lantern before you store it. Avoid storing it in high-temperature or high-humidity environments for a long time.
14. If the lantern gets hit or drops accidentally, the components inside may be

 
damaged and the lantern may malfunction. Please carefully protect the lantern from being hit or dropping.

15. There is a built-in lithium battery inside the lantern. Please dispose of it in accordance with the requirements of the local recycling authority.
16. Do not dispose of the lantern in a fire.
17. Please unplug the USB cable after charging the product.
18. Please do not charge the product with over-rated voltage.


WHAT'S INCLUDED




Camping Lantern x1




Shade

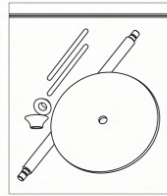 

Stand Accessories

 


Type-C to USB
Charging Cable x1

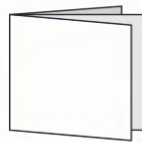 

User Manual x1

 KNOW YOUR LANTERN

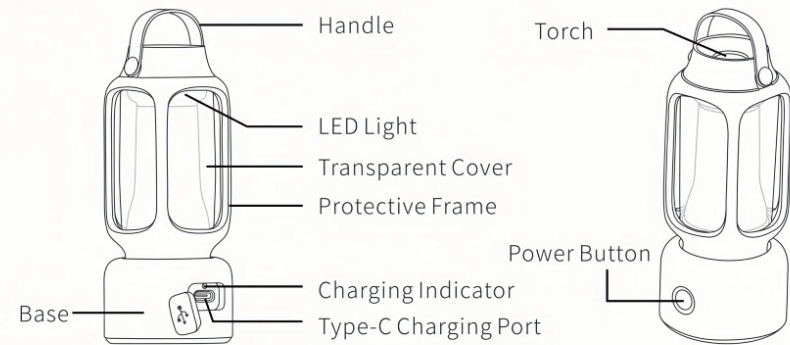


CHARGE

There is a built-in Lithium battery inside the lantern. Please fully charge it before your first-time use.

Step 1: Take out the plug on the base.

 Step 2: Charge the lantern using the Type-C to USB cable. It takes about 3 to reach a full charge.

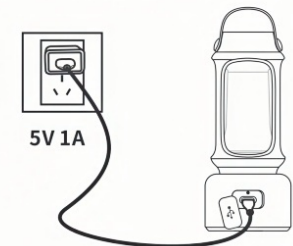

A Guide to the Charging Indicator



☀ Charging: Solid Red
Fully Charged: Solid Green

OPERATION GUIDE

All functions of this product can be controlled with one button.

1. Power on/Sunset Mode

Press the power button to turn on the light and enter the sunset mode. In this mode, the light is like the sunset glow.



Sunset

2. Sunrise Mode


After powering on, press the power button once to enter the sunrise mode. In this mode, the light is like the first light of morning.



Sunrise

3. Moon Mode


After powering on, press the power button twice to enter the moon mode. In this mode, the light is like the full moon which can illuminate the night.

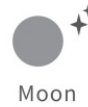

Moon


4. Torch Mode

After powering on, press the power button the third time to enter the torch mode. In this mode, you can use this lantern as a torch.

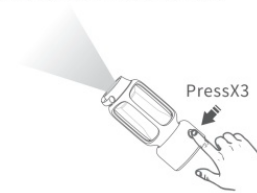

5. SOS Mode

After powering on, press the power button the fourth time to enter the SOS mode. The lantern then flashes for emergency case.

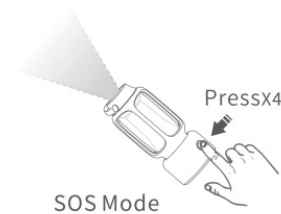

SOS Mode

💡 Tip:


After you set a mode, press the power button again to turn off the light if there is no operation within 10 seconds.

HOW YOUR LANTERN USES

There are 4 options for using this lantern.


Option 1:

Put the lantern on the desk with or without the shade. The shade makes the light more concentrated. It can sit anywhere!

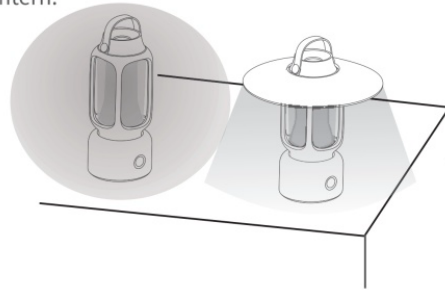


Option 2:

Carry this lantern with or without the shade when you walk outside at night. It can go everywhere!

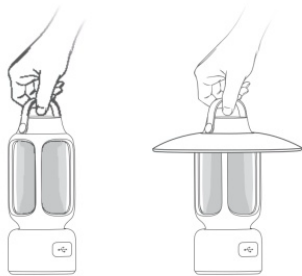

Option 3:

Hang this lantern up easily by its handle to let it glow from higher up. It can hang everywhere!

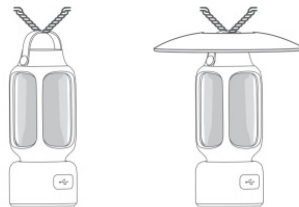


Option 4:

Install the stand accessories to the 1/4" screw hole at the bottom of the lantern. It can stand everywhere!

Step 1: Screw the two screws into both ends of the stick.

Step 2: Screw one side of the stick into the base of stand and another side into the base of the lantern.

Note: To unscrew the stand, you can insert the metal sticks we provided into the two holes on the stand and then twist them in the opposite direction.

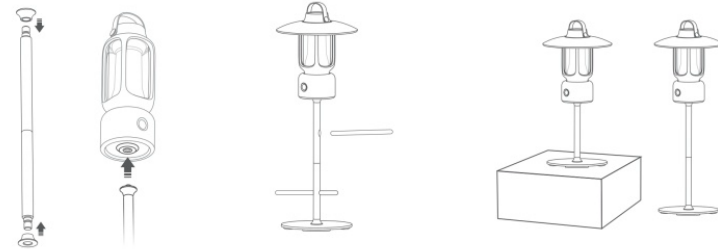

OVER DISCHARGE, OVERCURRENT AND SHORT CIRCUIT PROTECTION

When the camping lantern is over discharged, has overcurrent or a short circuit, it will enter the protection mode.

MAINTENANCE AND CARE

- * Do not use any abrasive to clean the transparent cover.
- * Never use the lantern in extremely cold (below -10°C)/hot (above 60°C) environments.
- * The IP rating of this lantern is IPX4. Please do not immerse it in water; otherwise, it may cause a circuit failure.

SPECIFICATIONS

Product Name	Mini Camping Lantern
Product Model	L599
Color Temperature	1500K~6500K
Brightness	I : 34 lm II :45lm III:58lm IV:82lm
Charging Time	≈3H
Battery Life	≈7~25H
Light Source	LED
Battery	Li-ion Battery 3.7V 2500mAh
Input	5V/1A
Rated Power	1.85W
Max. Power	2.3W
Radius of Lighting	3.5m
IP Rating	IPX4
Unit Weight	350g (with stand)
Unit Dimensions	50x50x115mm (no stand and shade) 110x110x294mm (with stand and shade)

TROUBLESHOOTING GUIDE

1. The camping lantern cannot be charged.

- *Try another compatible cable.
- * Try another socket.

2. The camping lantern does not work after a full charge.

- *Try to press the power button twice or more times.
- *Please check if there is water entering the lantern. If yes, please dry it and then try again.
- *Please check if the camping light can be charged. If it can't be charged, please contact us directly.